

A.J. Antunes & Co. Horizontal Radiant Toaster

Model HRT-5H

Daily maintenance tasks

PR 66 D1 Clean the Toaster
 & Inspect and
 Clean Wire Belt


Quarterly maintenance tasks

PR 66 Q1 Replace Damper
 Curtains

Annual maintenance tasks

PR 66 A1 Clean Cooling
 Fans

Model HRT-5H

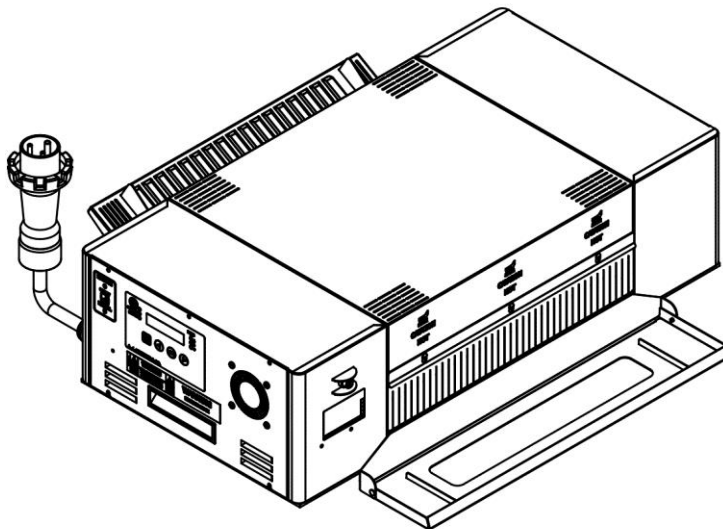

⚠ Hazards



These icons alert you to a possible risk of personal injury.

▨ Equipment alerts

Look for this icon to find information about how to avoid damaging the equipment while doing a procedure.

★ Tips

Look for this icon to find helpful tips about how to do a procedure.

Why	To ensure the unit is clean when toasting buns.	
Time required	2 minutes to prepare	5 minutes to complete
Time of day	After close	For 24-hour restaurants: during breakfast menu
Hazard icons	 Chemicals  Electricity	

Tools and supplies




Bucket, clean and sanitized towels Bucket, soiled towels KAY QSR Glass & Multi-Surface Cleaner Paper Towels KAYQUAT II Sanitizer Solution Heat-resistant Gloves Sink Detergent solution & Sanitizer solution

Procedure

1 Turn off Toaster.


Press the power button on the control panel to turn the toaster off. The toaster enters a cool-down mode and automatically shuts down when complete.

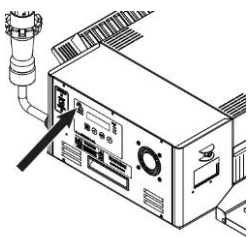

Electricity

2 Remove and clean the accessories.

Remove the accessories with heat-resistant gloves and take to the 3-compartment sink to wash, rinse, and sanitize. Allow to air dry or dry with a clean, paper towel.

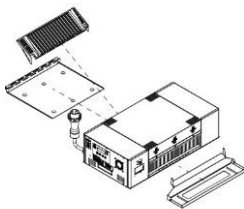


Chemicals

Sink Detergent solution, Sanitizer Solution

3 Clean outside of toaster.

Clean the outside surfaces of the toaster with a paper towel dampened with KAY QSR Glass & Multi-Surface Cleaner. Discard towel in soiled towel bucket after use. Allow to air dry.

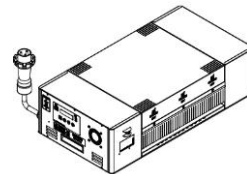


Chemicals

KAY QSR Glass & Multi-Surface Cleaner, Sanitizer Solution

4 Inspect Wire Belt

 Inspect the Wire Belt for excessive stretch. The belt should be tight and without slack or sagging. Remove links if there is too much slack.

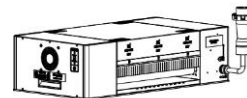

Tip


Refer to Owner's Manual 1011257 for instructions on removing links from the belt.

continued ►

Clean the toaster & Inspect and Clean Wire Belt (continued)

5 Clean Wire Belt

Clean the Wire Belt with a clean sanitized towel sprayed with KAYQUAT II Sanitizer Solution for one revolution.

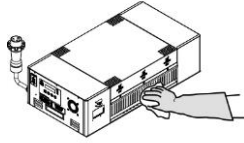


Tip
It may be necessary to clean the Wire Belt for more than one revolution.



Chemicals
KAYQUAT II Sanitizer Solution

6 Re-attach Accessories.

Re-attach the accessories to the toaster.

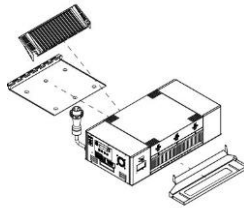



7 Turn the unit on.

Turn the unit on.




Electricity

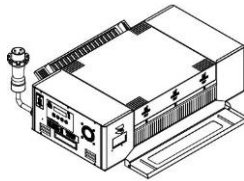

Why	To ensure the Damper Curtains are in good condition.	
Time required	2 minutes to prepare	5 minutes to complete
Time of day	After close	For 24-hour restaurants: during breakfast menu
Hazard icons	 Electricity	


Tools and supplies

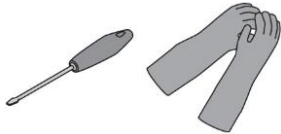


Flat Blade Screwdriver
Gloves, neoprene

Procedure


- 1 Turn off toaster.**
Press the power button on the control panel to turn the toaster off. The toaster enters a cool-down mode and automatically shuts down when complete.

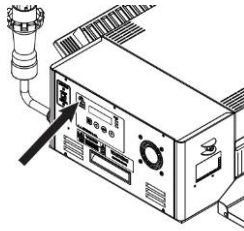


- 2 Remove accessories.**
Put on heat resistant gloves and remove the accessories from the toaster.

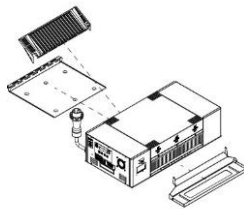


- 3 Remove Damper Curtains.**
Remove the three screws from the Damper Curtains. Remove Bracket and set aside with screws. Do this for the front and rear sides of the toaster.

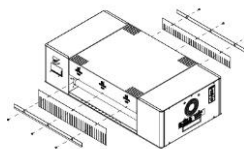


- 4 Install new Damper Curtains.**
Install the new Damper Curtains and secure with the Bracket and three screws. Do this for the front and rear sides of the toaster.

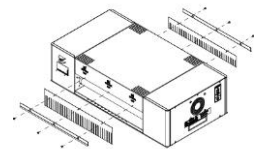


- 5 Re-attach Accessories.**
Re-attach the accessories to the toaster.

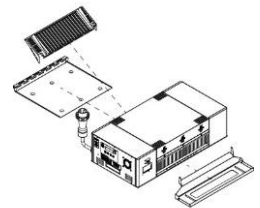

- 6 Turn the unit on.**
Turn the unit on.

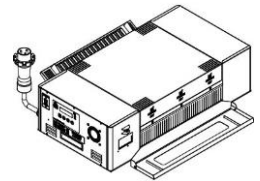

Why	To ensure the Cooling Fan are clean and operating correctly.	
Time required	2 minutes to prepare	10 minutes to complete
Time of day	After close	For 24-hour restaurants: during breakfast menu
Hazard icons	 Electricity	

Tools and supplies




Procedure


- 1 Turn off unit.**
Press the power button on the control panel to turn the toaster off. The toaster enters a cool-down mode and automatically shuts down when complete.




- 2 Remove accessories.**
Put on heat resistant gloves and remove the accessories from the toaster.

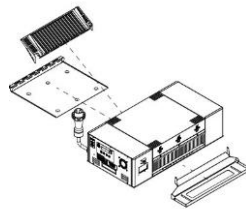


- 3 Open Left Side Panel.**
Loosen the two bottom screws and remove the three top screws from the left side panel. Lay the panel down carefully as shown. Do not disconnect any wires.

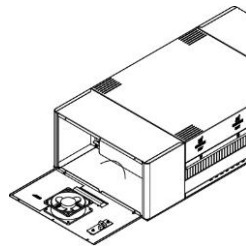


- 4 Clean Left Side Fan.**
Using the nylon-bristled brush, remove all lint and debris from the fan blades and surrounding area.

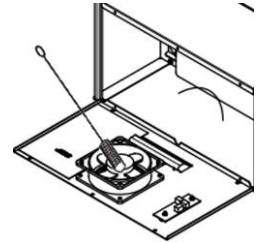

- 5 Close Left Side Panel.**
Re-attach the left side panel and secure with the screws.

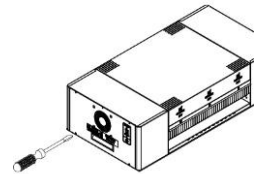


- 6 Open Right Side Panel.**
Loosen the two bottom screws and remove the three top screws from the right side panel. Lay the panel down carefully as shown. Do not disconnect any wires.
- continued ▶**

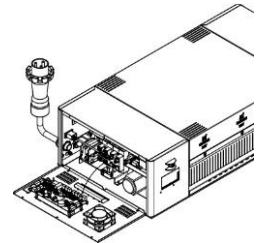

Clean Cooling Fans (continued)


7 Clean Right Side Fan.

Using the nylon-bristled brush, remove all lint and debris from the fan blades and surrounding area.

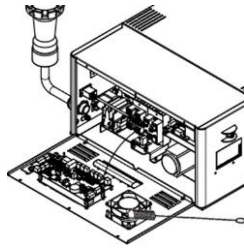


8 Close Right Side Panel.

Re-attach the right side panel and secure with the screws.

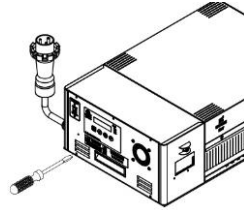

9 Re-attach Accessories.

Re-attach the accessories to the toaster.

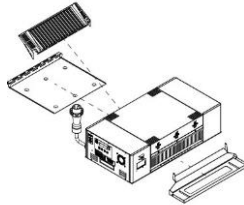

10 Turn the unit on.

Turn the unit on.

