



Why	To maintain food safety & operating efficiency	
Time required	5 minutes to prepare	10 minutes to complete
Time of day	After close	For 24-hour restaurants: during low-volume periods
Hazard icons	 Electricity  Chemicals	

Tools and supplies



Bucket, clean and sanitized towels



Bucket, soiled towels




Sanitizing Solution

Procedure

1 Turn OFF power switch.

Turn off power switch just-left of temperature display.

Leave door open to warm freezer compartment.

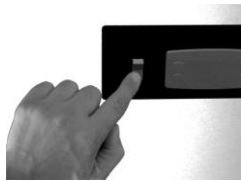

2 Remove unused food.

Remove unused product from the freezer. Place in walk-in freezer.



3 Clean wire shelves.

Remove the three wire shelves. Wash, rinse and sanitize them at the three-compartment-sink. Let them air dry.



4 Wipe down inside & out.

Use a clean towel to wipe out any water, food or packaging waste from inside the freezer.

Use a clean towel with sanitizing solution to wipe down freezer inside and all outside surfaces. Rinse with clear water.

Wipe all inside surfaces with another clean towel. Leave the door open to air dry.



Sanitizing Solution



5 Replace shelves.

Replace the bottom, middle and upper wire shelves in freezer, and close the door. Turn on power switch. Note: Restock after freezer reaches at least 15 degrees F



Why	To save energy and improve freezer performance	
Time required	5 minutes to prepare	10 minutes to complete
Time of day	At close	For 24-hour restaurants: during low-volume periods

Hazard icons  Electricity  Hot Surfaces  Sharp Objects/Surfaces

Tools and supplies



Gloves, neoprene




Brush, soft

Procedure

1 Turn OFF power switch.

Turn off power switch mounted just-left of temperature display.

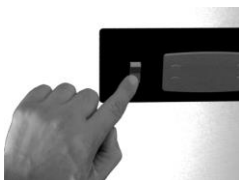

Put on neoprene gloves.



2 Open front access panel.


Lift vented panel up slightly and out from slot and tab alignment release from cabinet and set aside.



Condenser coil fins are sharp.

3 Clean condenser coil and fins.


Use a soft brush to remove dust and debris from the condenser coil and fins. Brush gently up and down until all dust and debris are gone. Take care not to bend or flatten fins.

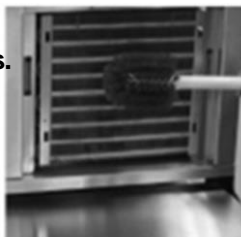

Refrigeration lines may be hot. Avoid touching them.

4 Replace front access panel.

Position vented panel just above opening, insert into metal tabs slide top down into 4 slots down into slot channels.

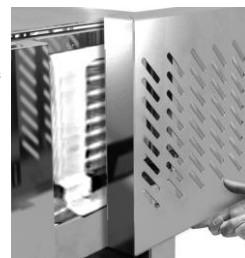

Condenser coil fins are sharp. Avoid touching them.

5 Inspect door gaskets

Inspect gaskets on the freezer door for tears, cracks or damage. Replace gasket as needed.



Contact Franke Resupply at: 1-800 423-5247 to purchase new gasket.

6 Turn ON power switch.

Close door.

Turn on power switch mounted just-left of temperature display.

