

H&K International

BBR, 36" PROPANE REFRIGERATOR

Weekly maintenance tasks

RF 10 W01 Clean Unit

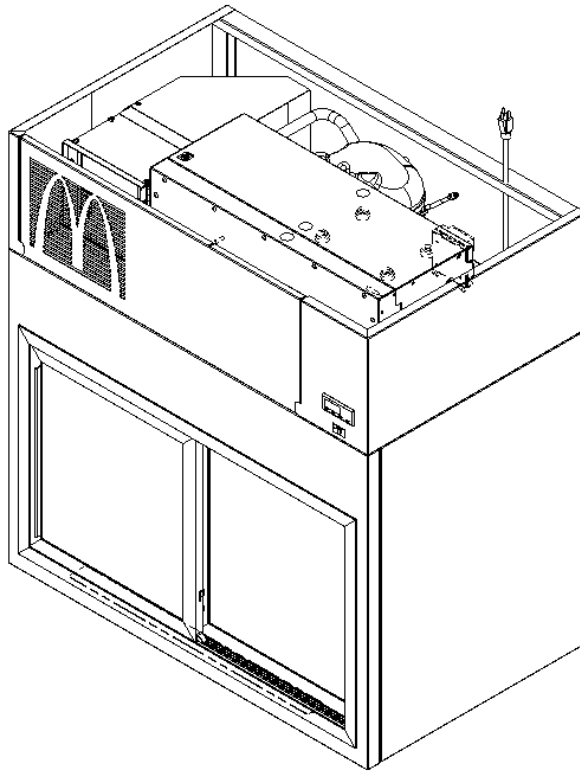
Quarterly maintenance tasks

RF 05 Q1 Check gasket

RF 05 Q2 Clean Condenser coil

Annual maintenance tasks

RF 05 A1 Clean Condensate Evaporator

**⚠ Hazards**

These icons alert you to a possible risk of personal injury.

▨ Equipment alerts

Look for this icon to find information about how to avoid damaging the equipment while doing a procedure.

★ Tips

Look for this icon to find helpful tips about how to do a procedure.

Clean Unit

Weekly

RF 05 W01

Why	The unit must be cleaned weekly to ensure proper operation.	
Time required	5 minutes to prepare	15 minutes to complete
Time of day	Evening after closing	For 24-hour restaurants: during slow period
Hazard icons	 Electricity	

Tools and supplies Clean cloth

**1 Turn off unit**

Turn off the power switch and unplug the unit from the wall.

**5 Reinstall Doors**

Reinstall doors in opposite order from removal.

★ **Tip**

Ensure spring tabs engage the door for self closing mechanism

**2 Remove items from unit**

Place remaining items into walk-in cooler while cleaning the unit.

6 Plug in and turn on the unit

Plug the unit back into the same wall receptacle and turn on the power switch. Allow to reach operating temperature

**3 Remove doors**

Grab outside door and lift up to clear lower track and swing bottom out. Repeat for the other door.

**6 Re-fill unit with products**

Re-fill the unit with the items from the walk-in cooler.

4 Wipe down unit

Wipe down inside and outside of unit with a rag and sanitizing solution. Clean doors and glass. Wipe out door tracks.

Why

The sliding door gaskets must be checked to ensure they maintain a proper seal. Failure to check the gaskets and replace when bad, will result in temperature performance problems and increased energy consumption.

The condenser coil must be cleaned regularly to ensure the unit operates at peak performance. Failure to do so could result in food product quality risks, premature refrigeration failure, additional energy usage and voiding of warranty.

Time required

10 minutes to prepare

20 minutes to complete

Time of day

Evening after closing

For 24-hour restaurants: during slow period

Hazard icons**Tools and Supplies**

Shop vacuum
Soft bristled brush

**1 Turn off unit**

Turn off the power switch and unplug the unit from the wall.

**2 Remove panel**

Lift up on panel as shown to clear the tabs

**3 Remove panel**

Tilt the panel forward to remove

**4 Clean condenser coil**

Using a soft bristled brush and vacuum, remove any dirt present on the coil.

★ Tip

Make sure to brush with the direction of the fins

5 Replace panel

Re-install panel by sliding bottom of panel behind the retaining

★ Tip

Make sure to check that the panel is tightly secured

**6 Check gasket**

Slide open one of the doors to expose the gasket. Check the gasket for worn areas or tears.

If gasket is torn, call H&K service at **800-788-2445** to order replacement. Repeat for other door.

**7 Plug in the unit and turn it on**

Plug the unit back into the same wall receptacle and turn on the power switch. Allow to reach operating temperature.

**8 Re-fill unit with products**

Re-fill the unit with the items from the walk-in cooler.