

HRT-5H NEW MUFFIN SETTINGS PROGRAMMING INSTRUCTIONS

AFFECTED PRODUCTS: HRT-5H Toasters

General

This document describes how to change the settings on the HRT-5H toaster for the new McDonald's Muffin. Please contact A.J. Antunes & Co. Technical Service at 1-877-392-7854 with any questions or concerns regarding these instructions.

1. While in "Muffin Ready", press ◀ or ▶ to adjust the Light/Dark Adjustment value to the center setting.
2. While in "Muffin Wait" or "Muffin Ready", press and hold the **MENU** button (Figure 2) until the control panel displays "Heater A" The display shows the setpoint, operating current, and SSR Duty cycle.
3. Press the **OK** button. Then use the ◀ and ▶ buttons to change the Heater A value to 65%. Press **OK** again to save the change.
4. Press ▶ (Figure 2) to scroll to the Heater B setting. Press **OK**. Then use the ◀ and ▶ buttons to change the Heater A value to 65%. Press **OK** again to save the change.
5. Press ▶ to scroll to the Heater C Setting. This should be set to 0 (zero). If the setting is not 0, press **OK**. Then use the ◀ and ▶ buttons to change the Heater C value to 0%. Press **OK** again to save the change.
6. Press ▶ to scroll to the Muffin Toast Color Setting. Press **OK**. Then use the ◀ and ▶ buttons to change the Muffin Toast Color value to 750. Press **OK** again to save the change.
6. Press ▶ to scroll to the Bagel Toast Color Setting. Press **OK**. Then use the ◀ and ▶ buttons to change the Bagel Toast Color value to 500. Press **OK** again to save the change.

The table below describes the new settings for Heaters A, B, and C as well as Muffin and Bagel toast color:

Value	Default Setting
Heater A & B	65%*
Heater C	0 %*
Muffin Toast Color	750*
Bagel Toast Color	500*

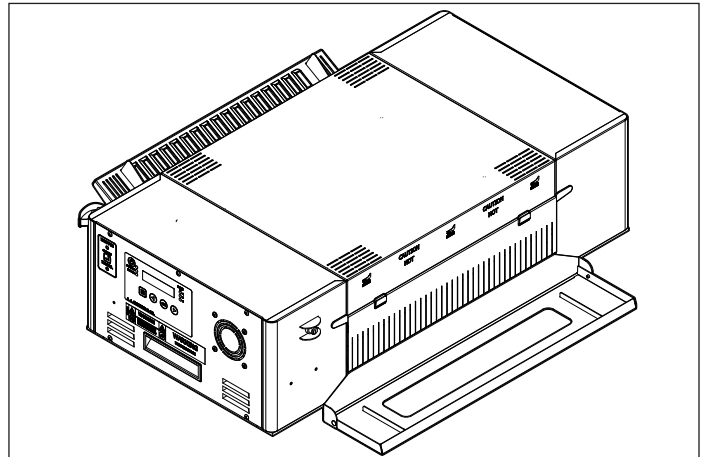


Figure 2. HRT-5H

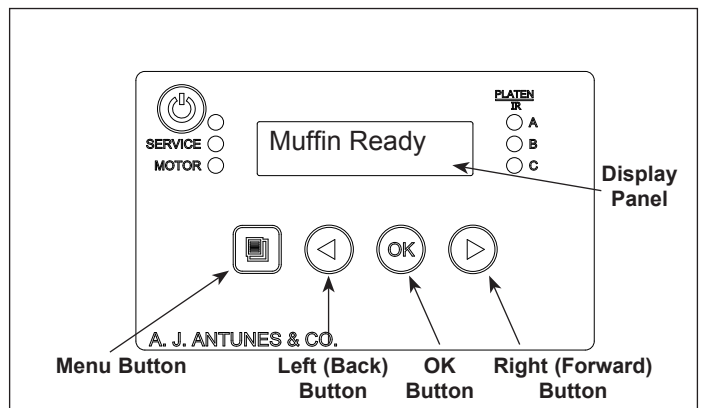


Figure 2. HRT-5H Control Panel