

Franke, Inc. High Capacity Meat Freezer

Models HCMF-18 and HCMF-30


Weekly maintenance tasks

RF 12 W1 Inspect & clean
freezer interior

Quarterly maintenance tasks

RF 12 Q1 Clean condenser
coil & inspect door
gaskets

Model HCMF-30 Shown

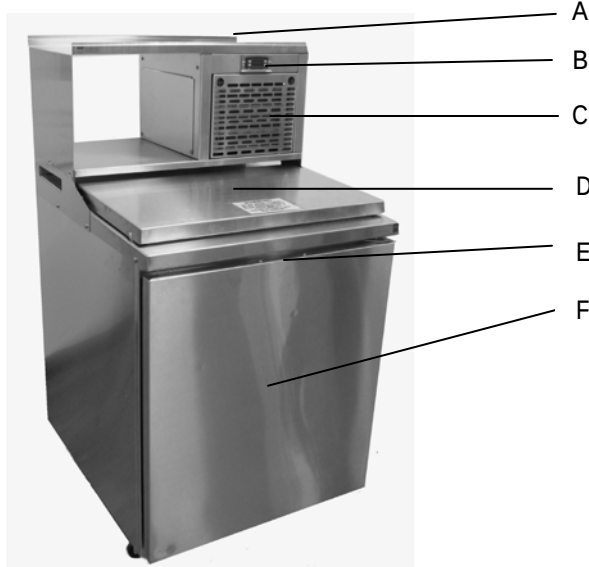

A. Power ON-OFF Switch (rear-upper-left on Condenser)

B. Digital Temperature Display/Controller

C. Condenser/Condenser Filter Access Panel

D. Roll-back Top Product Access Door

E. Optional – Gloves Pack Holder

F. Main Case Loading Door

Not Shown:

Removable Wire Shelves (Upper & Middle)

Hazards

These icons alert you to a possible risk of personal injury.

Equipment alerts

Look for this icon to find information about how to avoid damaging the equipment while doing a procedure.

Tips

Look for this icon to find helpful tips about how to do a procedure.

Why	To maintain a clean work environment and for food safety	
Time required	5 minutes to prepare	10 minutes to complete
Time of day	After close	For 24-hour restaurants: during low-volume periods
Hazard icons	 Chemicals	

Tools and supplies


Bucket, clean and sanitized towels



Bucket, soiled towels



McD All Purpose Super Concentrate (APSC) solution

Procedure

- 1 Wipe down outside of freezer. Use a clean towel with McD APSC Solution to wipe down the outside of the freezer. Wipe the grill tool shelf, top, sides and back of the freezer. Be sure to clean all grease splatter from the grill.



Chemicals
McD APSC

Why	To prevent frost from building up and for food safety	
Time required	5 minutes to prepare	10 minutes to complete
Time of day	After close	For 24-hour restaurants: during low-volume periods
Hazard icons	 Electricity  Chemicals	

Tools and supplies



Bucket, clean and sanitized towels



Bucket, soiled towels



Sanitizing Solution

Procedure

- 1 Remove unused food.
Remove unused product from the freezer. Place in walk-in freezer.



- 2 Turn OFF power switch.
Turn off power switch mounted on back (upper-right) of top-mounted compressor housing.



- 3 Clean wire shelves.
Remove the upper and middle wire shelves. Wash, rinse, and sanitize them at the three-compartment-sink. Let them air dry.



Tip
Pull center shelf forward so mounting studs release side brackets.

- 4 Wipe down inside & out.
Use a clean towel to wipe out any water, food or packaging waste from inside the freezer.



Use a clean towel with sanitizing solution to wipe down freezer inside and all outside surfaces. Rinse with clear water.

Wipe all inside surfaces with another clean towel. Leave the door open to air dry.

 Chemicals
Sanitizing Solution



- 5 Replace shelves.
Replace the upper and middle wire shelves in freezer. Close door.



Turn on power switch.




Tip
Upper shelf rests on brackets. Middle shelf is height-adjustable, with three sets of hole cutouts for sidewall mounting studs.

Why	To save energy and improve freezer performance	
Time required	5 minutes to prepare	10 minutes to complete
Time of day	At close	For 24-hour restaurants: during low-volume periods
Hazard icons	 Electricity  Hot Surfaces  Sharp Objects/Surfaces	

Tools and supplies



Gloves, neoprene

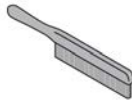

Brush, soft


Procedure

- 1 Turn OFF power switch.**
Turn off power switch mounted on back (upper-right) of top-mounted compressor housing.

Put on neoprene gloves.



Electricity

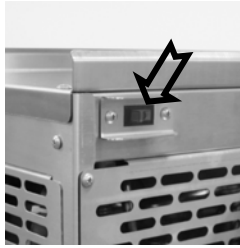

- 2 Open front access panel.**
Remove front vented access panel from top-mounted compressor housing. Pull out to release from catches.



Sharp Objects/Surfaces
Condenser coil fins are sharp.



- 3 Clean condenser coil and fins.**
Use a soft brush to remove dust and debris from the condenser coil and the condenser fins. Brush gently until all dust and debris are gone. Take care not to bend or flatten fins.



Hot Surfaces
Refrigeration lines may be hot. Avoid touching them.



- 4 Replace front access panel.**
Position vented panel in opening so magnetic catches can hold panel.



Sharp Objects/Surfaces
Condenser coil fins are sharp. Avoid touching them.



- 5 Inspect door gaskets**
Inspect gaskets on the roll-back top lid and front door for tears, cracks or damage. Replace gasket as needed.



Tip
Contact Franke Resupply at: 1-800 423-5247 to purchase new gasket.



- 6 Turn ON power switch.**
Turn on power switch mounted on back (upper-right) of top-mounted compressor housing.



Electricity

