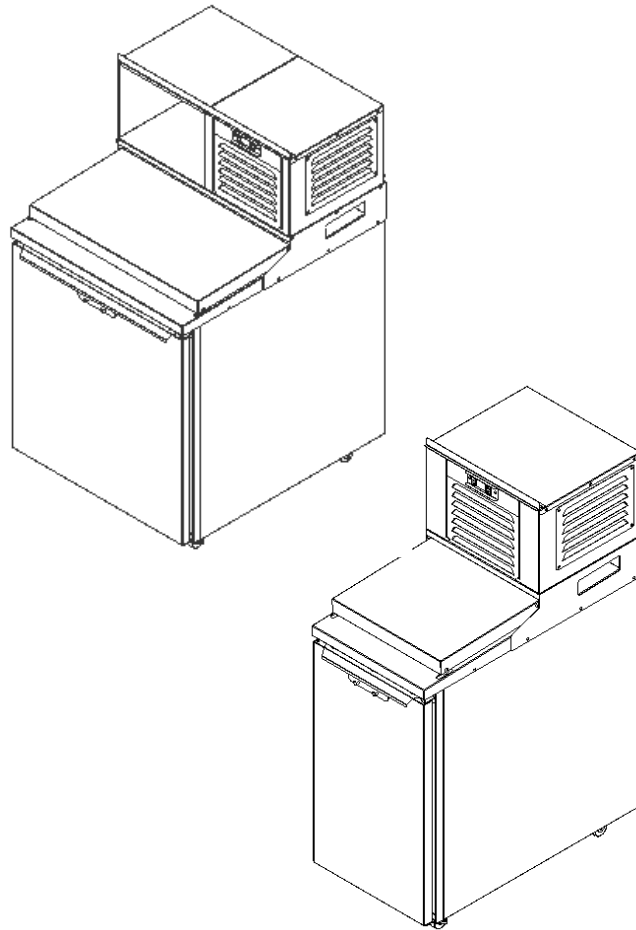


H&K International High Capacity Modular Freezer (HCMF)

Weekly maintenance tasks

RF 10 W1 Clean Unit

Quarterly maintenance tasksRF 10 Q1 Clean Condenser
Coil**Annual maintenance tasks****△ Hazards**

These icons alert you to a possible risk of personal injury.

▨ Equipment alerts

Look for this icon to find information about how to avoid damaging the equipment while doing a procedure.

★ Tips

Look for this icon to find helpful tips about how to do a procedure.

Why	The unit must be cleaned weekly to ensure proper operation.	
Time required	5 minutes to prepare	15 minutes to complete
Time of day	Evening after closing	For 24-hour restaurants: during slow period
Hazard icons	 Electricity	

Tools and supplies



Clean cloth

Procedure

1 Turn off unit

Turn off the power switch and unplug the unit from the wall



2 Remove items from unit

Place remaining items into walk-in freezer while cleaning unit.

3 Wipe down unit

a. Remove top sliding cover. Clean area behind cover with a towel and sanitizing solution.

b. Wipe down inside and outside of unit with a towel and sanitizing solution. Clean doors. Wipe out lid tracks.



4 Defrost Unit with Door Open

With unit OFF, allow door to remain open for 6 hours.

5 Plug in unit and turn on

Plug the unit back into the same wall receptacle and turn on the power switch. Allow to reach operating temperature.



6 Re-fill unit with products

Re-fill the unit with the items from the walk-in

Why

The condenser coil must be cleaned regularly to ensure the unit operates at peak performance. Failure to do so could result in food product quality risks, premature refrigeration failure, additional energy usage, and voiding of warranty.

Time required

10 minutes to prepare

15 minutes to complete

Time of day

Evening after closing

For 24-hour restaurants: during slow period

Hazard icons

Electricity

Tools and supplies

Soft bristled brush

Procedure**1 Turn off unit**

Turn off the power switch and unplug the unit from the wall.



Electricity

**2 Remove panel**

Lift panel up to clear tabs at bottom.

**3 Remove Panel**

Tilt bottom of panel out and pull down.

**4 Clean Condenser Coil**

Using a soft bristled brush, remove any dirt present on the coil.



Tip

Make sure to brush with the direction of the fins.


**5 Replace panel**

Reinstall panel by inserting top of panel and then tilt bottom of panel in. Then push panel down behind tabs.



Tip

Make sure to check that the panel is tightly secured.

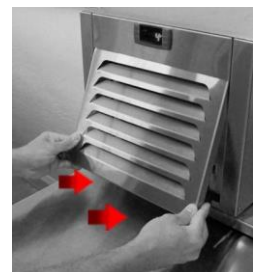**6 Turn on unit**

Plug unit into wall receptacle and turn on power switch. Wait for unit to reach operating temperature before using.



Electricity

