

Cream Dispenser
Model SK-1



Daily Cleaning

Cream Dispenser
Model SK-1

Product Identification



Cream Dispenser

Model SK-1



Cleaning the dispenser

Tools and Supplies Required



Bucket, Clean and Sanitized Towels



Bucket, Soiled Towels



Gastro norm Metal Pan



Gloves, Neoprene



McD All Purpose Super Concentrate (APSC) solution


1

Turn the Creamer off and remove empty creamer bag. Pull and turn valve to release cream tube. Remove the cream bag from the compartment



2

Clean drip tray. Take the drip tray to 3 compartment sink to wash, rinse, and sanitize

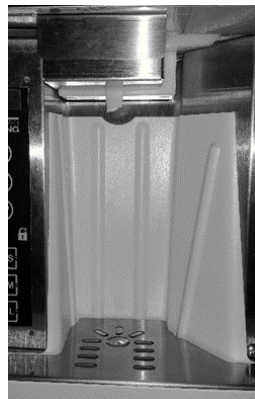

3

Wipe down creamer once it has defrosted completely. Wipe down the cold block and inside of creamer with APSC and Sanitizer Solution.



4

Refill Creamer. Insert a new bag of cream into dispenser. Pull and turn valve to secure cream tube. Replace the drip tray.

