

**Weekly
Maintenance Tasks**

**Cream Dispenser
Model SKMCD1P/C1**



Tools and supplies



Clean, sanitizer-soaked towels



Bucket, soiled towels



KAY®
SolidSense Sanitizer
Solution



KAY®
SolidSense All
Purpose Super
Concentrate
(APSC Solution)



Brush, soft



KAY®
QSR Glass &
Multi-Surface
Cleaner Solution

Cream Dispenser Model SKMCD1P/C1



This maintenance will ensure accurate dispense amounts


Time required: 5 minutes to prepare 5 minutes to complete

Time of day: Every time a bag of cream is replaced.


For 24-hour restaurants: Every time a bag or cream is replaced

Procedure

1. **Remove the Valve Insert.** Press on the valve slide and remove the valve insert by pulling it straight up.

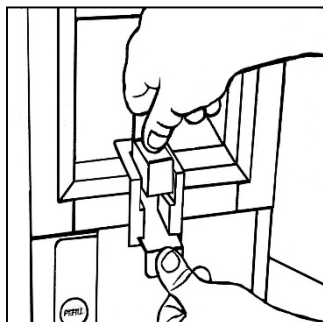


2. **Clean Valve.** Once removed, the valve can be washed, rinsed and sanitized at the 3-compartment sink with a soft brush and KAY All Purpose Super Concentrate (APSC) or other McDonald's approved cleaner and KAY SolidSense Sanitizer. Allow to air dry. APSC or McDonald's approved cleaning solution, sanitizer solution.

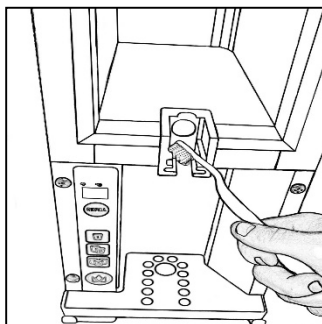

3. **Wipe Down Machine** Spray exterior of the machine with KAY Glass & Multi-Surface Cleaner (G7MSC) Solution and wipe with a sanitizer soaked towel. G&MSC & sanitizer solution.
4. **Install Container and Bag** Insert a new beverage bag into the container. Place container inside the cabinet and guide tube through valve area. Push and hold valve slide white inserting the valve insert from above. Be sure to press and hold the **REFILL** button after replacing the beverage bag.



CUT TUBE 1" BELOW VALVE

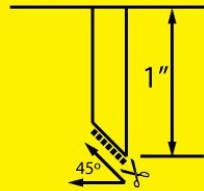

**Corte el tubo 1 pulgada
debajo de la válvula.**



**"REFILL" button MUST be pushed and held until display
reads "00" EACH time the bag is replaced to dispense
accurate quantities.**

**El botón "REFILL" debe ser presionado CADA vez
que la bolsa sea reemplazada para dispensar
cantidades precisas.**

38380

**Cream Dispenser
Model SKMCD1P/C1**



Calibration of dispense volumes on McDonald's Creamers SKMCD1P

***Always perform calibration checks with new bag of cream and after pressing REFILL button for 3 seconds**

For units with serial numbers **prior to SAHG** (with J Hook)

1. Install new bag of cream
2. Press and hold refill button for 3 seconds (display should flash 00)
3. Place cup under dispenser
4. Press 1 small, 2 medium and 1 large shot
5. Total dispensed should be 3 ounces. (/8 ounce for 1 shot)
6. If not correct, then pull screw out past J Hook as far as it will go
7. Measure distance from J Hook to head of screw
8. Adjust to the distance = $\frac{3}{4}$ "
9. If still off, contact tech support at 800-329-3329 (Call while in front of the machine and provide serial number)

NOTE: Do not attempt to adjust controller in programming. Discrepancy of dispense volume is caused by mechanical issue, not programming)

For units with serial numbers **after SAHJ** (with cotter pin style – No J Hook)

1. Install new bag of cream
2. Press and hold refill button for 3 seconds (display should flash 00)
3. Place cup under dispenser
4. Press 1 small, 2 medium and 1 large shot
5. Total dispensed should be 3 ounces (3/8 ounce for 1 shot)
6. If not correct, then call technical support at 800-328-3329 (call while in front of machine and provide serial number)

NOTE: Do not attempt to adjust controller in programming. Discrepancy of dispense volume is caused by mechanical issue, not programming)